

### Removal


---

1 Remove air filter (not required for engines 110.98, 616 and 617).


2 Push control lever (7) forward and disconnect clip (8) of wire strand.

3 Remove lock (10) on clips (9) of cable control envelope.


4 Compress clips (9) of cable control envelope and take control out of bracket.

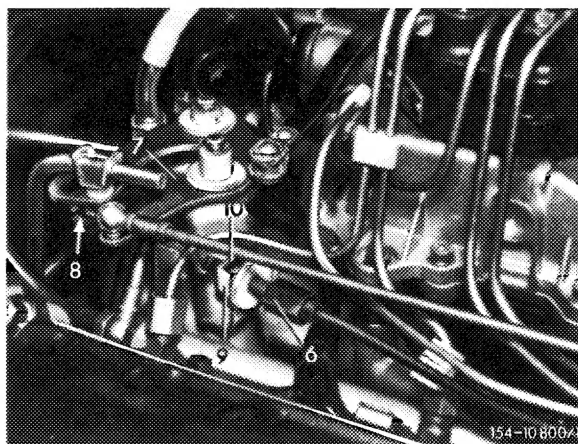

5 Loosen cable control from fastening members of engine and body and remove.

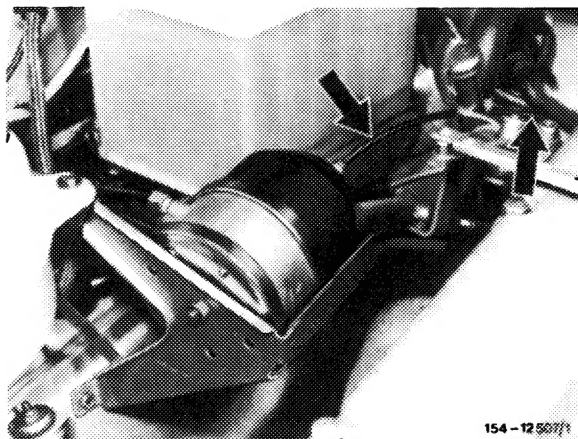


Install cable control model 107.022/042 with electronic injection system from actuator to front wall

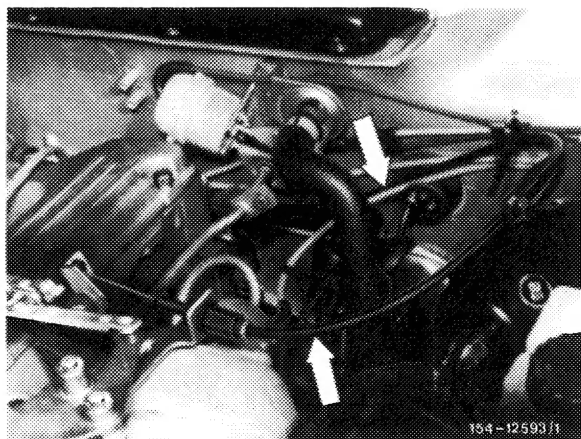


Install cable control model 107.022/042 with electronic injection system from front wall to control


Install cable control model 107.022/043 with CIS injection system from front wall to control.

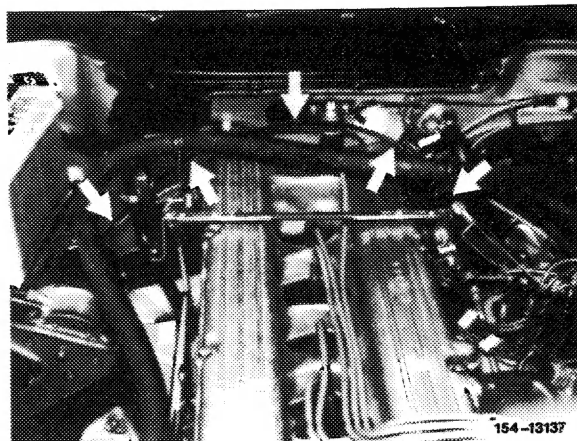


Install cable control model 107.023/024/043/044 from actuator to engine.

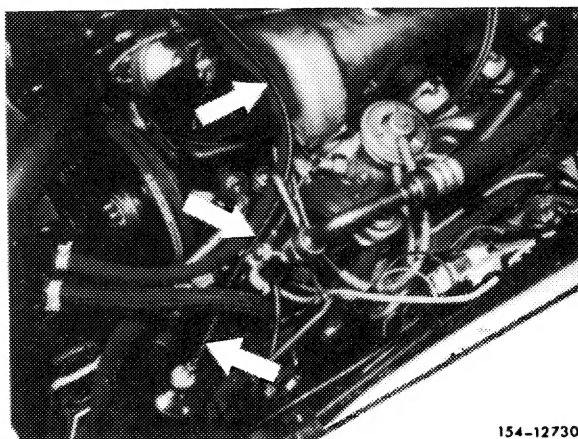


Install cable control model 107.026 from actuator to engine.

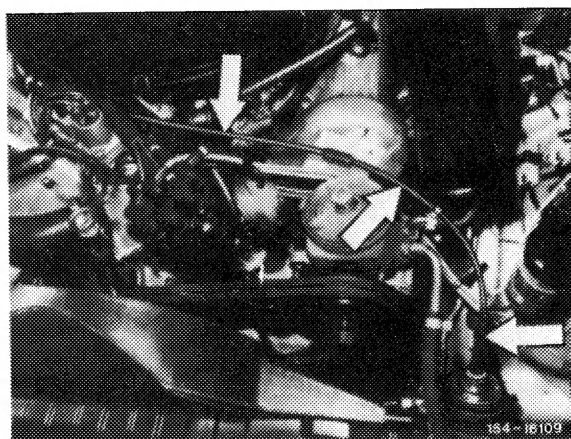


Install cable control model 107.023/024/043/044 with electronic injection system on engine.

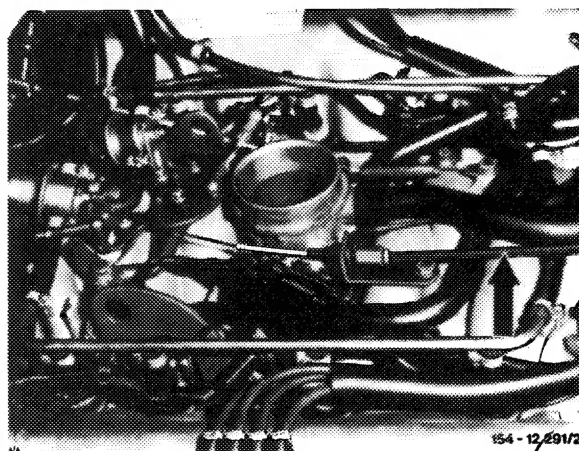


Install cable control model 107.023/024/026/043/044 with  
CIS injection system on engine.

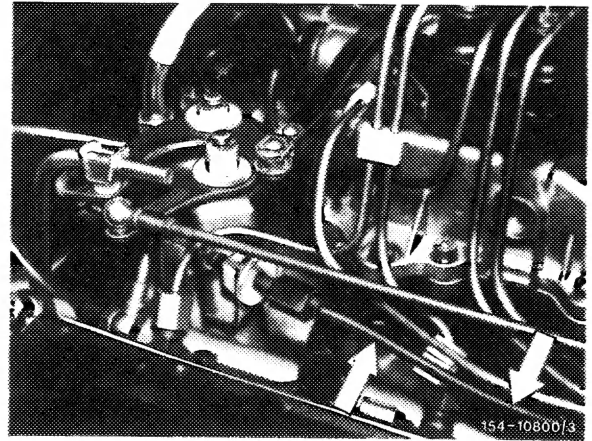


Install cable control models 114.060/073  
on front wall

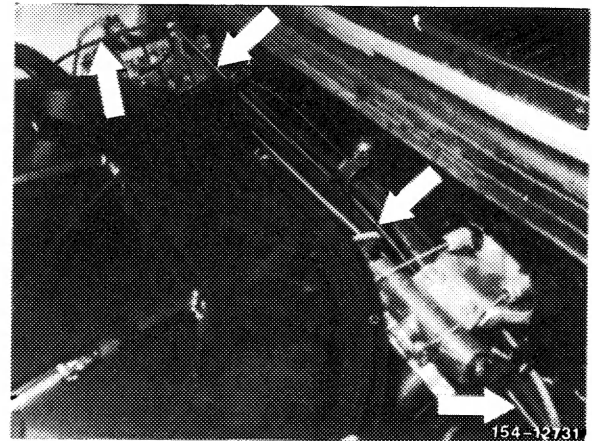


Install cable control model 115.114

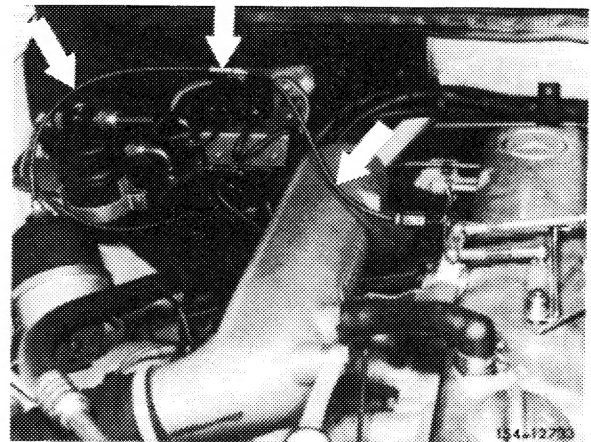


Install cable control  
model 116.020

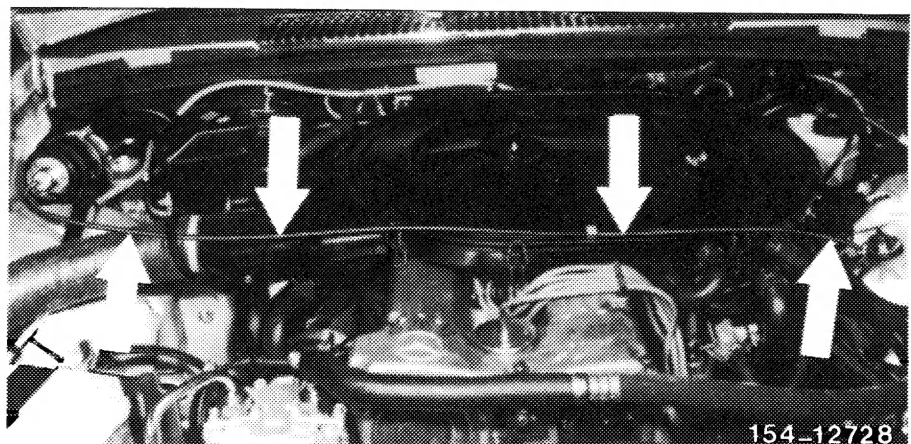


Cable control layout model 123.033/053/093,  
righthand steering vehicle

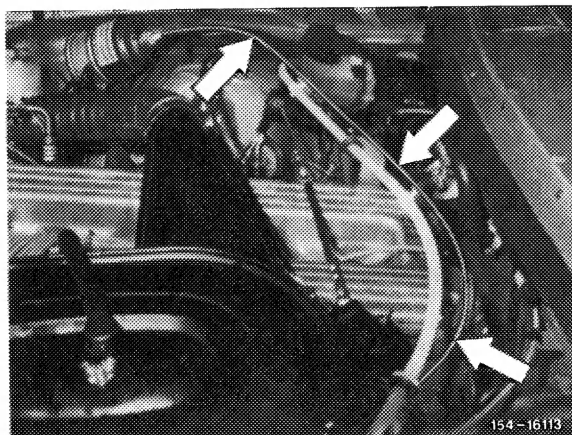

Cable control layout model 123.123/130/150/183/190  
lefthand steering vehicle without longitudinal regulating  
shaft

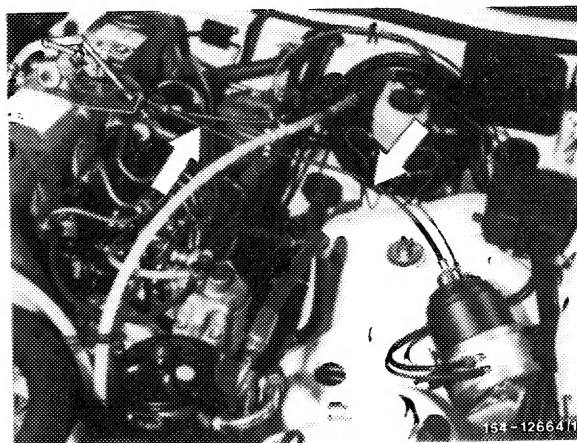

Cable control layout model 123.123/130/150/183/190  
lefthand steering vehicle with longitudinal regulating shaft

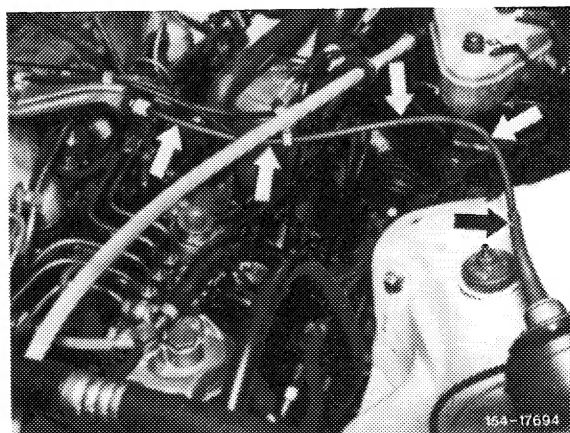

## Installation

- 6 For installation proceed vice versa.
- 7 Adjust cable control (54—560).
- 8 Operational checkup on road.

Cable control layout model 123.123/130  
righthand steering vehicle

